

PLEASE DO NOT REMOVE INSTRUCTIONS!! All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html>

VOLUME ADJUSTMENT

The sound comes from the Anchor Amp. Use the VOLUME UP/DOWN to adjust the volume.
Plug the RCA audio cable into the Patch panel on the wall.
Computer audio needs to be plugged into the Mini Jack next to the VGA on the patch.
The Amp is always on. You can use it to play any audio source without turning on the Projector.

If you want to use an EXTERNAL COMPUTER/LAPTOP

Plug the External Computer VGA into the VGA slot on the Patch Panel.
Turn on the Video Projector by pressing PROJ and ON at the Smart Pad
Select VGA on the Smart Pad.
If your picture does not display it might be necessary to tell the computer to output VGA by using the appropriate FUNCTION combination for your computer.

If you want to use S-VIDEO (SVHS)

Plug your S-Video/SVHS cable into the video slot on the Patch Panel.
Turn on the Projector by pressing PROJ and ON at the Smart Pad.
Select PLATE SVHS on the Smart Pad.

If you want to use VIDEO

Plug the RCA cable into the Video slot on the Patch Panel.
Turn on the Video Projector by pressing PROJ and ON at the Smart Pad.
Select PLATE VID on the Smart Pad.

TO TURN OFF THE EQUIPMENT

Turn off the Video Projector by pressing PROJ and OFF
Wait for the green light to turn red on the Video Projector
to ensure the Video Projector is off or until the light in the lens turns off.
The fan will continue to run for 1-3 minutes after turning off the Video Projector.

**If having problems please call: 2-9400 TO REACH TSC
Problems can be emailed to tsc@bgsu.edu .
Problems and future equipment requests can also be
emailed to ims-req@lists.bgsu.edu .**

