

PLEASE DO NOT REMOVE INSTRUCTIONS!!

All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html> or visit My.BGSU.edu and select Classroom Technology from the Tools menu.

TURNING ON THE VIDEO PROJECTOR:

Press the "PC" button on the Control Center (*Please see the diagram below for a picture of the Control Center*)

If the system was just shut off you may have to wait 30 seconds after the Video projector fan shuts off to be able to turn the system back on again

To adjust VOLUME:

Select an input and turn the volume knob on the Control Center to the level of sound you want

COMPOSITE VIDEO (DVD, VCR, Camcorder, etc.)

Plug device into the Video and Audio jacks on the Patch Panel

Press the "VIDEO" button on the Control Center

EXTERNAL COMPUTER (Laptop):

Use the VGA with Audio cord provided at the Teaching Station to plug into your laptop

Plug it into the Patch Panel where it says "PC" and your PC

Turn on the computer, and then press "PC" on the Control Center

Press the appropriate Function keys on your laptop to bring up the image on the Video Projector

EXTERNAL AUDIO SOURCE (CD player, tape player, MP3 player):

Plug the Audio cable into L & R Audio on the Patch Panel

Press "VIDEO" on the Control Center

If using a mini cable, plug the mini into the VGA (PC) Audio on the patch panel and select "PC" on the Control Center

(See "To adjust Volume" above)

TURNING OFF THE EQUIPMENT

- ✓ To turn off Video Projector, Press the "PC" button on the Control Center for approximately 5 seconds (When you see the LED light next to the "PC" button stop flashing you can release the button. The Video Projector should turn off)
- ✓ Wait for the green light to turn red on the video projector to ensure the video projector is off or until the light in the lens turns off.
- ✓ The fan will continue to run for 1-3 minutes after turning off the Video Projector

