

PLEASE DO NOT REMOVE INSTRUCTIONS!! All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html>

TO TURN ON VIDEO PROJECTOR:

Turn on Main Power Strip and Press ON, on the Key Pad
 *** Video Projector must be turned on first to use any of this equipment

To adjust volume

Select the input you are using if you have not already (ex: VCR, DVD)
 Press the Vol ▼ / Vol ▲ on the Key Pad

If you want to playback a VHS tape:

Turn on the DVDVCR unit
 Press VCR on the Key Pad
 Put your VHS tape into the VCR and press play

If you want to use CLOSED CAPTION: (only VCR and Composite Video)

Turn knob on Closed Caption box to desired setting
 **If you see a black box it means the Closed Captioning is on, if you do not want closed captioning turn knob to off position.

Caption Box



If you want STREAMING VIDEO:

Press STREAM VIDEO on the Key Pad
 Press "Select" on STB or Pace remote (select button), use the arrow keys ↑ ↓ to get to the correct Stream channel
 Press 'select' again on the STB or the Pace remote.
 Press 'Info' on the Pace remote to remove the Stream label
 Press "Play" (play button) on the Pace remote to start your video.

Stream Box



If you want to play a DVD:

Turn on the DVDVCR unit
 Press DVD on the Key Pad
 Put your DVD in the player and press play

If you want to use the Instructor Computer

Turn on the computer
 Press INSTRUCTOR COMPUTER on the Key Pad
 Wait for the computer to load, mouse and keyboard is in the cabinet

If you want to use an External Computer

Use the VGA with Audio cord provided
 Plug it into the Patch Panel where it says COMPUTER IN VGA and your PC
 Turn on the computer
 Press PLATE VGA on the Key Pad

If you want to use a PRESENTER

Plug one end of the S-video cord in the Panel that says SVHS and the other end in the presenter.
 Then Press PLATE SVHS on the Key Pad. Be sure the presenter is turned on

If you want to use the Plate Vid

Plug the video cord in the Composite input on the Patch Panel
 Plug in Audio cords in the Left and Right inputs on the Patch Panel
 Press PLATE VIDEO on the Key Pad

If you want to use the Plate Audio:

Turn on the rack, you do not need the projector on if you are just using the audio
 Plug the Audio cable into L & R Audio on the Patch Plate
 Press either PLATE VIDEO or PLATE SVHS.
 If using a mini cable, plug the mini into the VGA audio on the patch
 Select PLATE VGA on the Key Pad
 (See "To adjust Volume" above)

If you want to use a Microphone:

Plug the Microphone into the MIC jack on the Patch Panel
 Press the MIX button on the Switcher
 (the LED by the MIX button will be lit when the mixer is on)
 Adjust the volume with the MIC Volume knob

TO TURN OFF EQUIPMENT

- ✓ Turn off the computer by going to START, SHUTDOWN on the screen
- ✓ To turn off Video Projector, Press OFF on the Key Pad, then turn off Main Power Strip
- ✓ Wait for the green light to turn red on the video projector to ensure the video projector is off or until the light in the lens turns off.
- ✓ The fan will continue to run for 1-3 minutes after turning off the Video Projector

If having problems please call: 2-9400 TO REACH TSC
Problems can be emailed to tsc@bgsu.edu .
Problems and future equipment requests can also be emailed to ims-req@lists.bgsu.edu

