

PLEASE DO NOT REMOVE INSTRUCTIONS!!

All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html> or visit My.BGSU.edu and select Classroom Technology from the Tools menu.

TO TURN ON VIDEO PROJECTOR:

Turn on Main Power Strip then Press ON, on the Key Pad

TO ADJUST VOLUME:

- 1) Select the input you are using if you have not already (ex: VCR, DVD)
Press the Vol▼ / Vol▲ on the Key Pad (Mute light should be off on Switcher)
- 2) Turn the "AV Switcher" knob on the Mixer until the volume is at a good level





VCR:

Turn on the DVDVCR unit
Press VCR on the Key Pad
Put your VHS tape into the VCR and press play

CLOSED CAPTION: (only VCR and Composite Video)

Please call IMS Distribution 372-6993 to set up Closed Captioning.

STREAMING VIDEO:

Press STREAM on the Key Pad
Press "Select" on STB or Pace remote  , use the arrow keys   to get to the correct Stream channel
Press 'Select' again on the STB or the Pace remote.
Press 'Info' on the Pace remote to remove the Stream label
Press "Play"  on the Pace remote to start your video.

Stream Box



DVD:

Turn on the DVDVCR unit
Press DVD on the Key Pad and put your DVD in the player and press Play

INSTRUCTOR PC:

Turn on the computer
Press INSTR PC on the Key Pad, then wait for the computer to load (mouse and keyboard are in the cabinet)

EXTERNAL COMPUTER (Laptop):

Use the VGA with Audio cord provided
Plug it into the Patch Panel where it says COMPUTER IN VGA and your PC
Turn on the computer, then press VGA on the Key Pad

PRESENTER:

Plug an S-video cord into the SVHS on the Patch Panel and the presenter.
Press SVHS on the Key Pad. Be sure the presenter is turned on

PATCH PANEL VIDEO (Camcorder, external DVD/VCR):

Plug the video cord in the Composite input on the Patch Panel
Plug in Audio cords in the Left and Right inputs on the Patch Panel
Press VIDEO on the Key Pad

EXTERNAL AUDIO SOURCE (CD player, tape player, MP3 player):

Turn on the rack, you do not need the projector on if you are just using the audio
Plug the Audio cable into L & R Audio on the Patch Plate
Press either VIDEO or SVHS.
If using a mini cable (ex: MP3 player), plug the mini into the VGA audio on the patch and select VGA on the Key Pad
(See "To adjust Volume" above)

WIRELESS MICROPHONE:


Turn on the rack and the Wireless Microphone
Adjust the volume by turning the knob labeled WIRELESS MIC on the Mixer

MICROPHONE AT THE PATCH PANEL:

Plug the Microphone into the MIC jack on the Patch Panel
Adjust the volume with the knob labeled PATCH MIC on the Mixer

TO TURN OFF EQUIPMENT

- ✓ Turn off the computer by going to START, SHUTDOWN on the screen
- ✓ To turn off Video Projector, Press OFF on the Key Pad
- ✓ Turn off Main Power Strip
- ✓ Wait for the green light to turn red on the video projector to ensure the video projector is off or until the light in the lens turns off.
- ✓ The fan will continue to run for 1-3 minutes after turning off the Video Projector

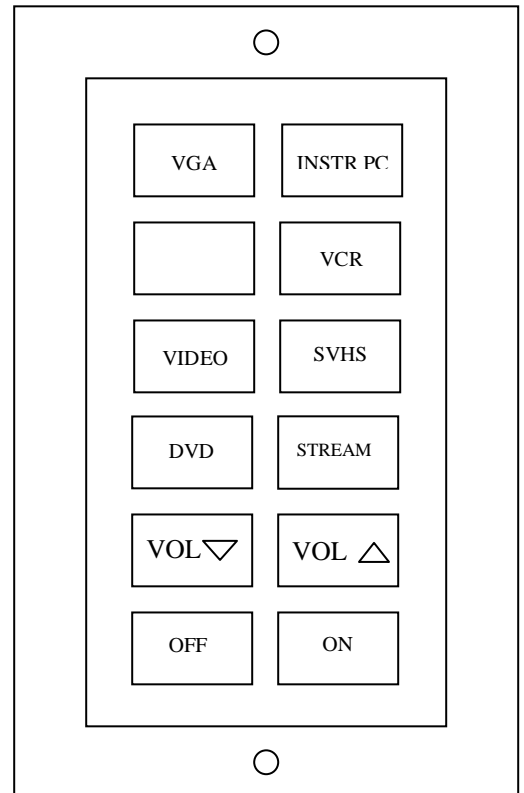

If having problems please call: 2-9400 TO REACH TSC
Problems can be emailed to tsc@bgsu.edu .
Problems and future equipment requests can also be
emailed to ims-req@lists.bgsu.edu .