

PLEASE DO NOT REMOVE INSTRUCTIONS!!

All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html> or visit My.BGSU.edu and select Classroom Technology from the Tools menu.

**ENook: LAPTOP**

- 1) Plug the VGA cable, provided in the ENook, into the back of your laptop
- 2) Press the "PC" button on the Control plate to turn on the Video projector
- 3) Adjust the volume by turning the volume knob on the Laptop Control plate to desired level
- 4) Press and hold the "PC" button for 5 seconds to turn off the Video Projector  
(When the LED light by the button flashes release the button and the VP will shut off)

If having problems please call: **2-9400 TO REACH TSC**  
Problems can be emailed to [tsc@bgsu.edu](mailto:tsc@bgsu.edu) .  
Problems and future equipment requests can also be  
emailed to [ims-req@lists.bgsu.edu](mailto:ims-req@lists.bgsu.edu) .



Levis Commons MBA 118, 122

PLEASE DO NOT REMOVE INSTRUCTIONS!!

All classroom rack instructions can be found at <http://www.bgsu.edu/offices/cio/page9632.html> or visit My.BGSU.edu and select Classroom Technology from the Tools menu.

**ENook: LAPTOP**

- 1) Plug the VGA cable, provided in the ENook, into the back of your laptop
- 2) Press the "PC" button on the Control plate to turn on the Video projector
- 3) Adjust the volume by turning the volume knob on the Laptop Control plate to desired level
- 4) Press and hold the "PC" button for 5 seconds to turn off the Video Projector  
(When the LED light by the button flashes release the button and the VP will shut off)

If having problems please call: **2-9400 TO REACH TSC**  
Problems can be emailed to [tsc@bgsu.edu](mailto:tsc@bgsu.edu) .  
Problems and future equipment requests can also be  
emailed to [ims-req@lists.bgsu.edu](mailto:ims-req@lists.bgsu.edu) .



Levis Commons MBA 118, 122