

HOW TO OPERATE THE EQUIPMENT IN THIS CABINET

TO TURN ON VIDEO PROJECTOR:

Turn on Main Power Strip and Press PROJ, then ON, on the Smart Pad
*** Video Projector must be turned on first to use any of this equipment

To adjust volume

Turn the program audio volume knob on the switcher to the right until you hear sound. (You may have to turn the knob more than one time around)

If you want to playback a VHS tape:

Turn on the DVDVCR unit
Press PROJ, then VCRDVD
Put your VHS tape into the VCR and press play

If you want Streaming Video:

Press PROJ, then STREAM VID
Using the Pace remote press 'select', use the arrow keys to get to the correct Stream channel then press 'select' again on the remote.

If you want to play a DVD:

Turn on the DVDVCR unit
Press PROJ, then DVD VID
Put your DVD in the player and press play

If you want to use the RACK COMPUTER:

Turn on the computer and Press PROJ, then RACK PC on the Smart Pad
Wait for the computer to load, mouse and keyboard is in the cabinet
The Keyboard can be unhooked from the rack computer extension cable and plugged in at the front wall for your convenience. Please reconnect the keyboard to the rack computer and put keyboard back in the rack when done.

If you want to use the RACK COMPUTER at the FRONT:

Turn on the computer and Press PROJ, then RACK PC on the Smart Pad
Wait for the computer to load, mouse and keyboard is in the cabinet
Unplug keyboard cable from cabinet USB extension and plug into the USB connection at the SMART PAD KEYBOARD USB

If you want to use an External Computer at the FRONT:

Use the VGA cord provided and Plug it into the panel on the front wall where it says VGA and your PC
Turn on the computer..... FOR AUDIO use a mini to mini cord and plug into AUDIO
Press PROJ, then (PLATE) VGA, then select PLATE VGA on the Extron switcher

If you want to use an External Computer at RACK:

Plug it into the panel on where it says COMPUTER IN VGA and your PC
Turn on the computer..... FOR AUDIO use a mini to mini cord and plug into AUDIO
Press PROJ, then (PLATE) VGA
On Extron switcher select RACK PLATE VGA manually

If you want to use a PRESENTER at the FRONT:

Plug one end of the S-video cord in the Panel that says SVHS and the other end in the presenter. Then Press PROJ, then PLATE SVHS. Be sure the presenter is turned on

If you want to use a PRESENTER at the RACK:

Plug one end of the S-video cord in the Panel that says SVHS and the other end in the presenter.
Be sure the presenter is turned on.
Press PROJ, then PLATE SVHS on the Smart Pad.
Then manually select Plate SVHS on Extron Switcher.

If you want to use the Plate Vid at the FRONT:

Plug the video cable in the Composite input and the audio cables in the Left and Right inputs on the Panel
Press PROJ, then PLATE VID on the smart pad

If you want to use the Plate Vid at the RACK:

Plug the video cord in the Composite input on the panel
Plug in Audio cords in the Left and Right inputs on the Panel
Press PROJ, then PLATE VID on the smart pad
Then manually select RACK PLATE VID on Extron switcher

If you want to use a Microphone:

Plug the Microphone into the MIC jack on the Patch Panel
Press the MIX button on the Switcher (the LED by the MIX button will be lit when the mixer is on)
Adjust the volume with the MIC Volume knob


TO TURN OFF EQUIPMENT:

Turn off the computer by pushing the power button on the front of the computer or by going to START, SHUTDOWN on the screen

To turn off Video Projector, Press PROJ, then OFF, then turn off Main Power Strip

Wait for the green light to turn red on the video projector to ensure the video projector is off or until the light in the lens turns off.

The fan will continue to run for 1-3 minutes after turning off the Video Projector

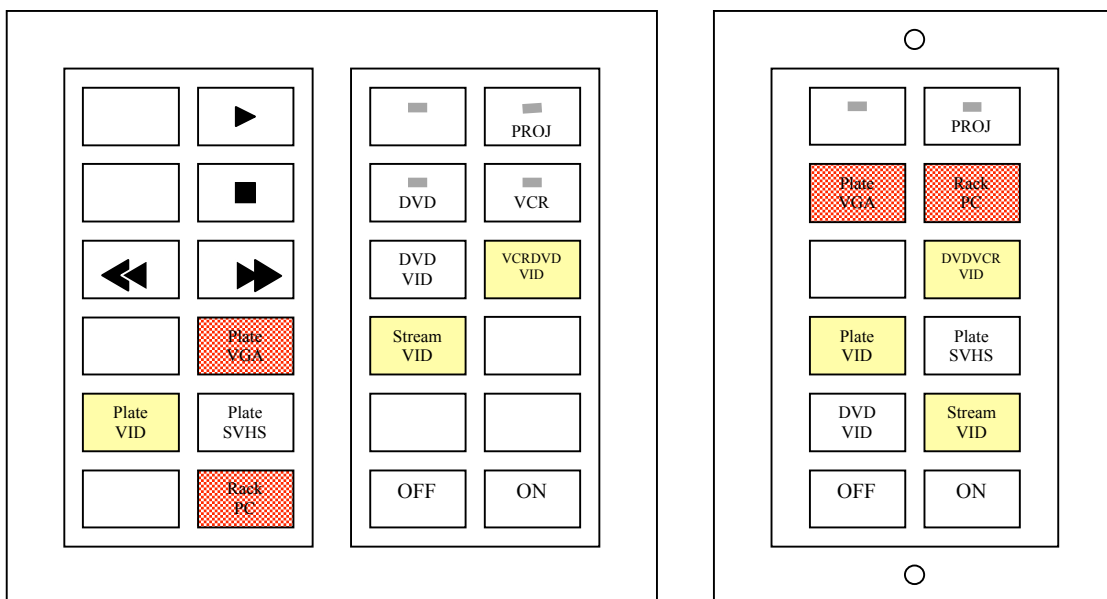

If having problems please call:

2-6993 TO REACH IMS

Email ims-req@listproc.bgsu.edu for future requests or to report problems in the classrooms.